


SET METAL PITCH PAN INTO 1/4" (5MM)  
THICK BED OF **HENRY 925 BES SEALANT**

METAL PITCH PAN

COAT METAL PITCH PAN  
WITH **HENRY 925 BES SEALANT**

MINIMUM 1/2" (10MM) CLEARANCE BETWEEN PIPES

FILL METAL PITCH PAN WITH **HENRY 925 BES SEALANT OR AQUA-BLOC 2P**  
(CURE PRIOR TO SUBSEQUENT  
INSTALLATIONS)

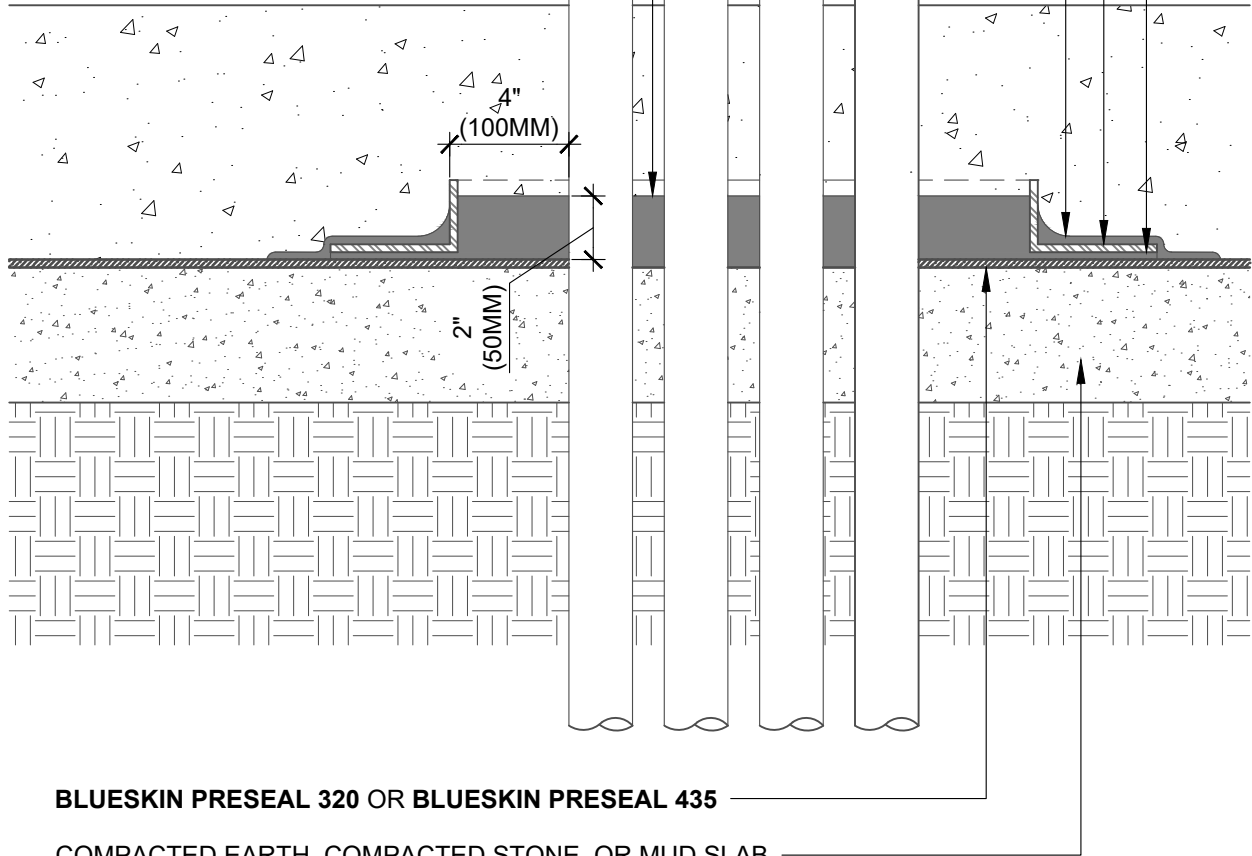

**BLUESKIN PRESEAL 320 OR BLUESKIN PRESEAL 435**

COMPACTED EARTH, COMPACTED STONE, OR MUD SLAB  
(COMPACTED EARTH AND COMPACTED STONE APPLICATIONS  
MUST USE **BLUESKIN PRESEAL 435**)

**NOTES:**

1. DETAIL SHOWS HENRY PRE-APPLIED WATERPROOFING SYSTEM FOR APPLICATIONS USING HENRY **BLUESKIN PRESEAL 320 OR BLUESKIN PRESEAL 435**. SUBSTRATE SHOWN IS FOR REFERENCE ONLY.
2. REMOVE DIRT, DEBRIS, RUST AND OTHER CONTAMINANTS FROM PIPE PRIOR TO **HENRY 925 BES SEALANT** INSTALLATION.
3. REFER TO PRODUCT SPECIFIC TECHNICAL DATA SHEET (TDS) AND GUIDE SPECIFICATION FOR INSTALLATION PROCEDURES.

MANUFACTURER GUIDE DETAILS ARE FOR REFERENCE ONLY. HENRY DOES NOT ASSUME RESPONSIBILITY FOR ERRORS OR DEVIATIONS IN DESIGN OR ENGINEERING. PROJECT SPECIFIC VERIFICATION IS RECOMMENDED PRIOR TO INSTALLATION.

**HENRY PRE-APPLIED WATERPROOFING SYSTEM**

**SLAB PENETRATION**

**BLUESKIN PRESEAL 320 OR BLUESKIN PRESEAL 435  
PITCH PAN AT PIPE BANK**

SCALE: N.T.S.

09-14-2022

**BSPS-9C**

