


790-11 Membrane
 Polyfab Reinforcement
 790-11 Membrane
 Polyfab Reinforcement
 790-11 Membrane
 Primer
 Deck

Cracks 1/16"-1/8"

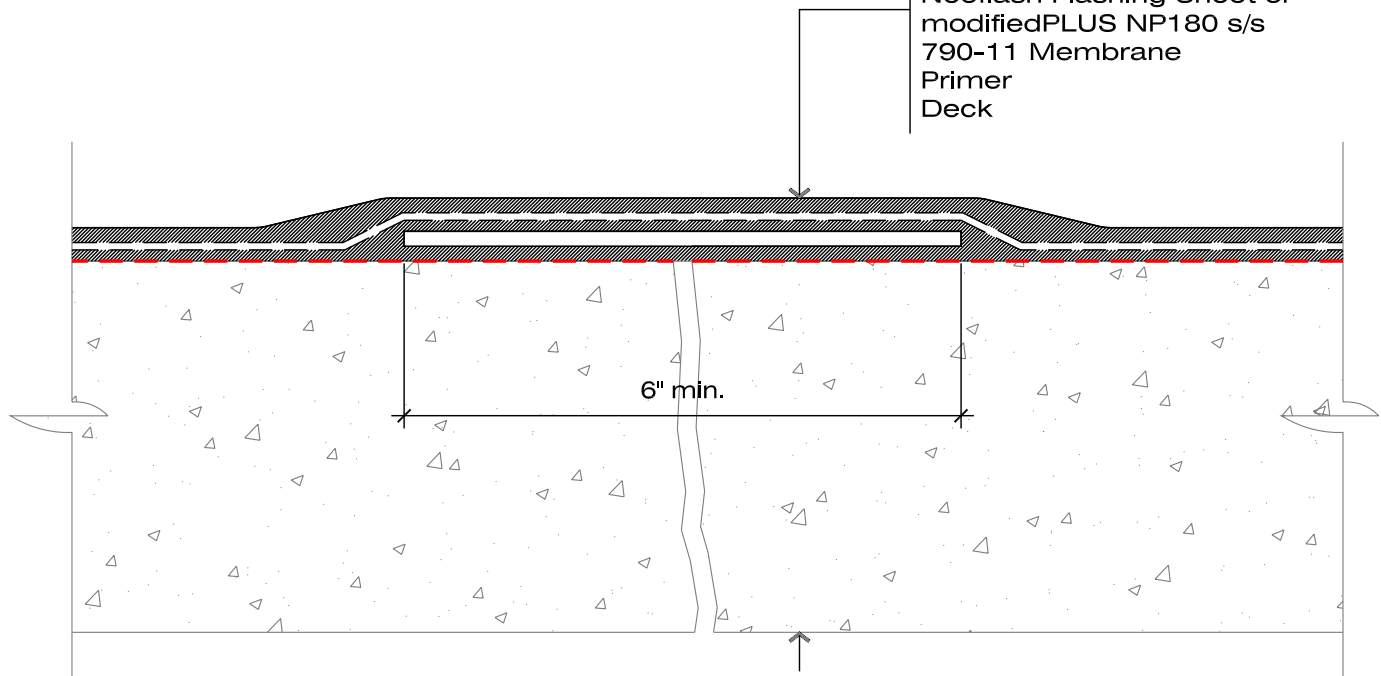

790-11 Membrane
 Polyfab Reinforcement
 790-11 Membrane
 Neoflash Flashing Sheet or
 modified PLUS NP180 s/s
 790-11 Membrane
 Primer
 Deck

Cracks 1/8"-1/2"

Notes:

1. Cracks up to $\frac{1}{16}$ " wide require no special treatment.

Henry
 COMPANY

790-11 MEMBRANE P.M.R. ASSEMBLY

SCALE: N.T.S.

CONCRETE DECK - TRANSITION

FIT TO PAPER

**CRACK
 TREATMENT**

HR-H115